

# OPERATION & MAINTENANCE

## Technocover Ultrasecure Cylinder Clamp

Technocover UltraSecure cylinder clamps are manufactured in mild steel plate and hot dip galvanised after manufacture to BS EN ISO 1461, a standard which determines that a product has a guaranteed minimum life expectancy.

### Operation

#### To open the cylinder clamp and remove the bottle...

Unlock and remove the Security padlock, if the locking arm has an integrated lock, unlock and retract the locking pin. Rotate the locking arm to 90° so that the locking arm can be lifted off its hinge pin. Once the arm has been removed, it can be stored on top of the unit. If optional retaining strap is present undo the strap so that the bottle can be removed. Remove the empty bottle from the cylinder clamp frame, taking care not to trap fingers between the bottle and the cylinder clamp.

#### To close the cylinder clamp...

Reverse the above procedure to secure the cylinder clamp.

### Maintenance

The cylinder clamp is totally maintenance free after installation, but extreme substances, such as acids, should not be brought into contact with the unit as they may adversely affect the life expectancy of the galvanising.

Annual inspection is, however, recommended to ensure that there is free movement of the locking arm.

Replacement components may be obtained from Technocover Ltd.

*(Ref. Document title: CCU-DV-2-O&M, Rev: A, Date: May 2015)*